

### **DIGI-HDE Installation Manual**

### Transmitter intelix Dollin DIGI-HDE-S










The Intelix DIGI-HDE extends HDMI, Ethernet, bidirectional IR and bi-directional RS232 over a single twisted pair cable. The DIGI-HDE supports 1080p, 2k, 4k, and 3D video up to 100m.

Built-in surge protection and diagnostic LEDs ensure hassle-free and robust installations. The DIGI-HDE incorporates HDBaseT technology.


### Instructions

- Turn off power and disconnect the audio/video equipment by following the manufacturer's instructions.
- 2. Connect twisted pair cable between the transmitter (DIGI-HDE-S) and the receiver (DIGI-HDE-R). (ensure T568B straight-thru wiring).
- 3. Connect required control cables. (IR/RS232/Ethernet)
- 4. Connect HDMI cables between the display and the receiver (DIGI-HDE-R).
- 5. Connect HDMI cables between the source and the transmitter (DIGI-HDE-S).
- 6. Connect the included power supplies to the transmitter and receiver.
- 7. Power on attached audio/video devices.

Serial
Communicaton
Wiring - RS232
connection
between send
and receive is
straightthrough.

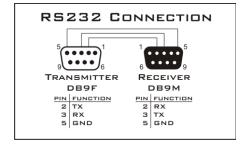

Twisted Pair Wiring - Use T568B wiring for Cat5e/6 connection between send and receive units.

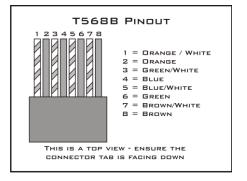

### Important notice:


- Do not attempt to disassemble or alter the extender housing. There are no user-serviceable parts inside the unit. Doing so will void your warranty.
- To minimize the possibility of equipment damage from electrostatic discharge (ESD), all source and destination equipment must be powered off during installation.
- Do not connect the extender to a telecommunication outlet wired to unrelated equipment. Doing so may damage the unit or any connected equipment. Ensure all connected twisted pair cabling is straight-through (point-to-point).
- Allow proper ventilation to reduce the risk of thermal failure.

Troubleshooting	
Symptom	Possible Solutions
No signal	Verify that both ends of the twisted pair cables
Status LED is off	use T568B crimp pattern.
	Verify HDMI cables and source and destination
	HDMI ports are operational.
No signal	Verify the power supplies are connected to both
	the send and receive baluns.
	Verify the power LEDs on both the send and
	receive units are brightly illuminated.
Unusual colors in the video	Power off the destination device and power it
	back on to force renegotiation.
	Unplug and re-plug the HDMI cable from receive
	to force renegotiation.






# QUICK START DIAGRAM

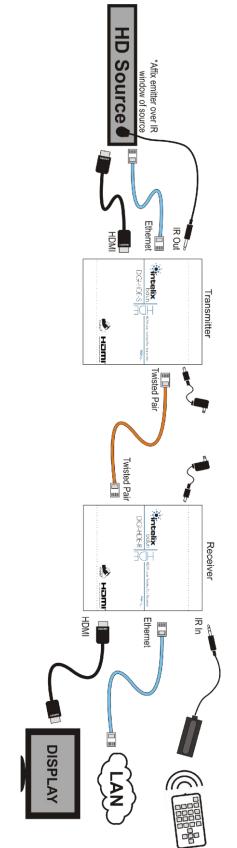

# Transmitter

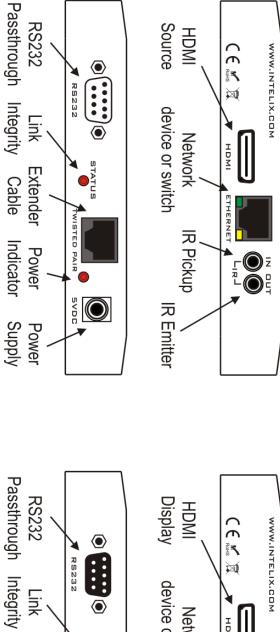

•

**(** 

SYDG


₩ RS232 

Ë

Extender Cable

HDMI

## Receiver

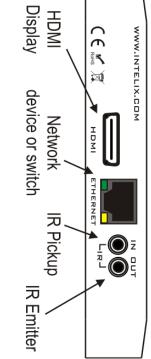



Indicator Power

Supply Power